


Fuel Tank

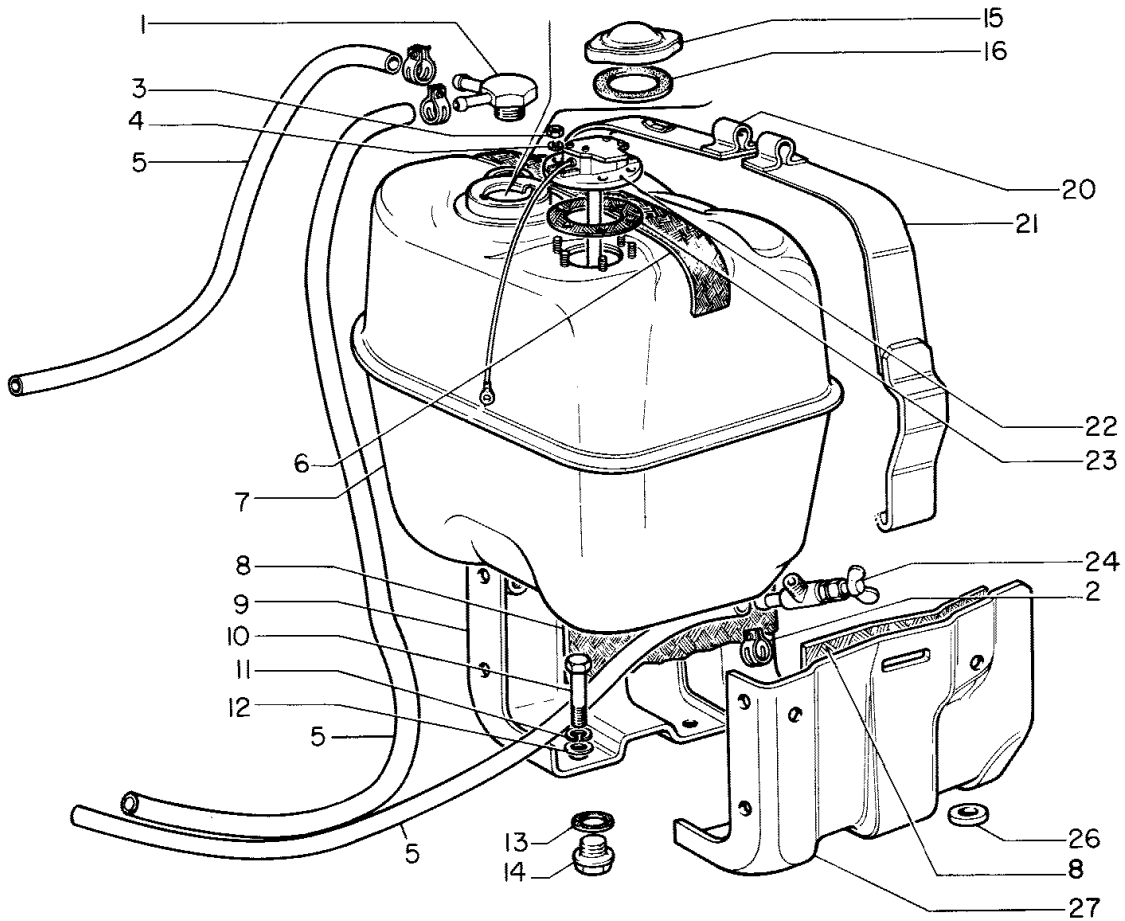

01	676888A	Union
06	676892A	Felt
08	676885A	Gasket
09	676890AS	Support
15	674020A	Cap
22	30-3054292	Sending Unit
23	676886A	Gasket
24	670990A	Drain Valve
26	676884A	Washer
27	676891AS	Support